

Parts Included:	Qty
LED Bracket	2
<b>Hardware: F183FB-Kit</b>	
M8x20mm Hex Head bolt	2
M8 flanged Hex nut	2



**LED Bracket Install:**


1. Starting with the driver side, behind the bumper end opening, remove the bolt that attaches the brace bar from the frame to the bumper and discard.
2. Remove the tinnerman clip and discard.



3. Remove the upper bolt that attaches the bumper end to the OE bracket and set aside. This bolt will be re-used for the install.



4. Identify the driver side LED bracket.

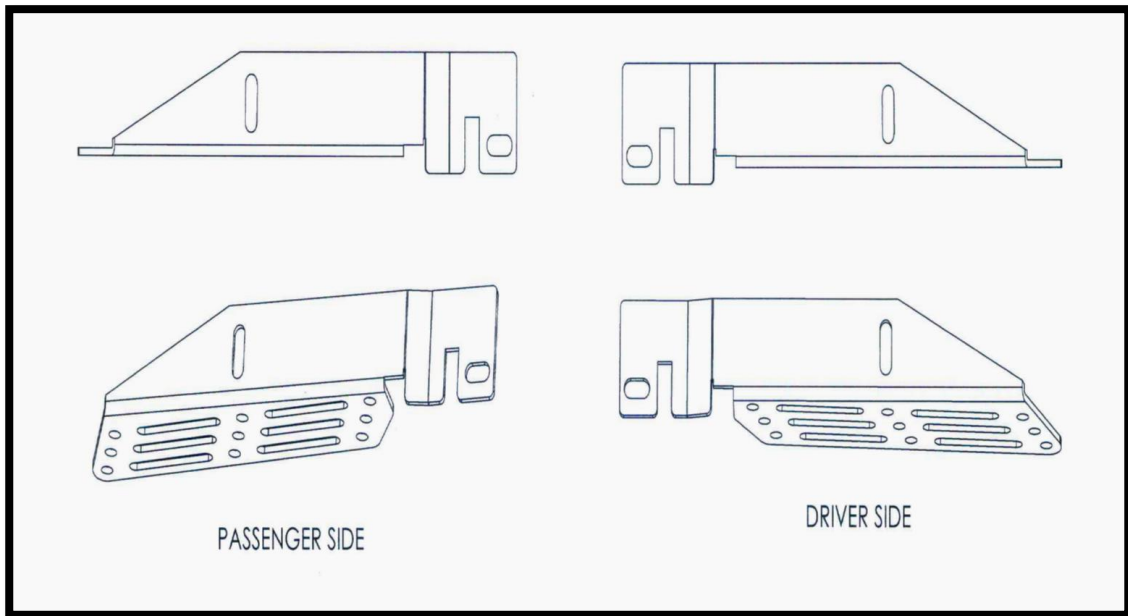

5. Install the driver side bracket using the OE bolt that was removed in **(step-1)** and the supplied M8x20mm Hex head and flanged nut. The OE bumper brace will be attached to the outside of the LED bracket. Leave loose at this time. **Note: It may be easier to install lights on bracket before installation.**



6. Adjust lights into desired position and secure.
7. Adjust the LED bracket to a level position and fully tighten hardware.

