


I-SHEET PART NUMBER: INST-00185
 PART NUMBER: **D1967QC, D1991QC-6**
 PRODUCT: **HOOP STEP**
 APPLICATION: **19-20 RAM 1500 QC**

| HARDWARE DESCRIPTION | | QTY. |
|----------------------|-------------------------------------|------|
| HWKT-00031X | | |
| FLNT-00696X | M8-1.25 CLASS 8 SERRATED FLANGE NUT | 18 |
| FDRW-00736X | M8 FENDER WASHER | 18 |



| PARTS INCLUDED | QTY |
|---------------------|-----|
| DRIVER SIDE STEP | 1 |
| PASSENGER SIDE STEP | 1 |

Step 1: Identify the DRIVER side step.

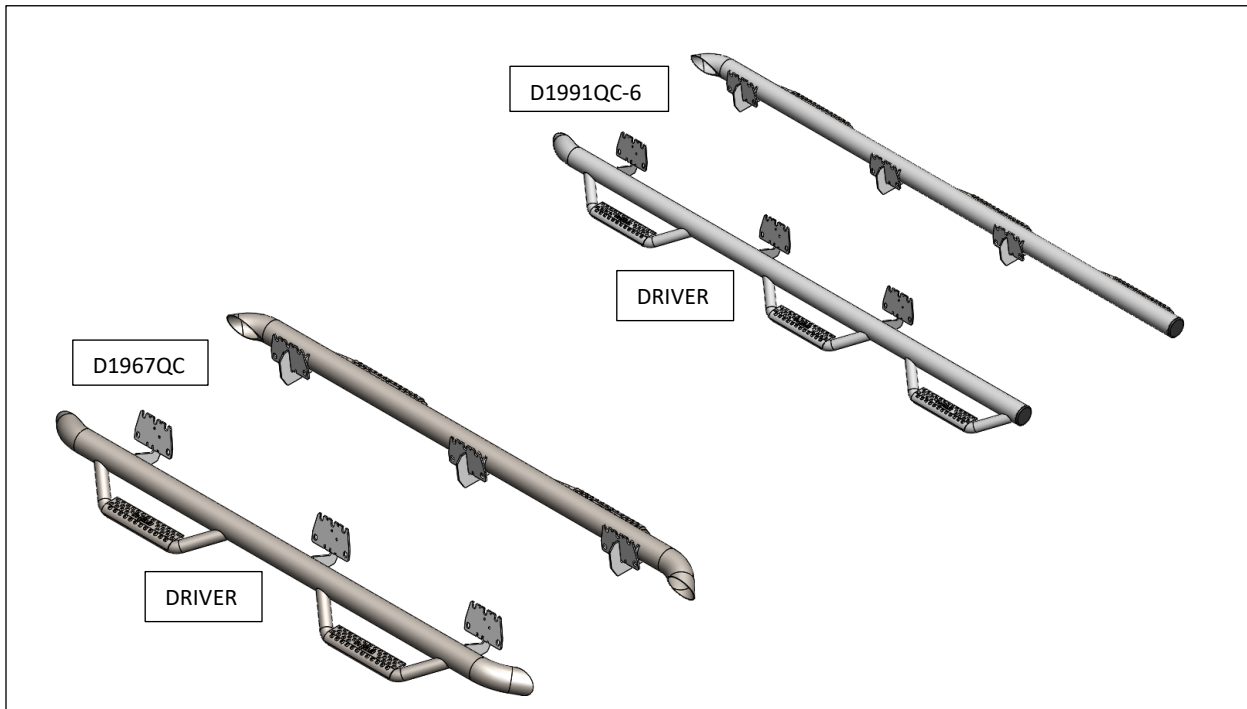

NOTE: If installing the bed access step prt# D1991QC-6, you may have to remove the plastic bed molding if there is contact with the main tube. Perform a test fit to determine if this is necessary and proceed with the install.



Step 2: Starting with the driver side, remove any steps and old hardware from the vehicle.



Step 3: On the inside rocker panel there will be three-attachment point consisting of three 8mm studs coming out from the panel. These studs may be covered in paint and will need to be cleaned before the installation.



Step 4: An additional person is recommended for this step. Carefully install the Hoop step to the three factory attachment points using the provided M8 flanged hex nuts. Leave finger tight for now.



Step 5: Next, adjust the Hoop step level with the body of the cab and tighten all hardware 30 ft. /lbs.



Step 6: Re-peat steps 3-5 for passenger side.

Your install in now complete.