




PART NUMBER: F1730OR, F1730LD,
 F174LB, F173LH
 PRODUCT: LIGHT BAR
 APPLICATION: 17-CCRRENT
 F-250/F-350


Parts Included:	Qty
Light Bar	1
Hardware :	
Uses Factory Tow Hook bolts	

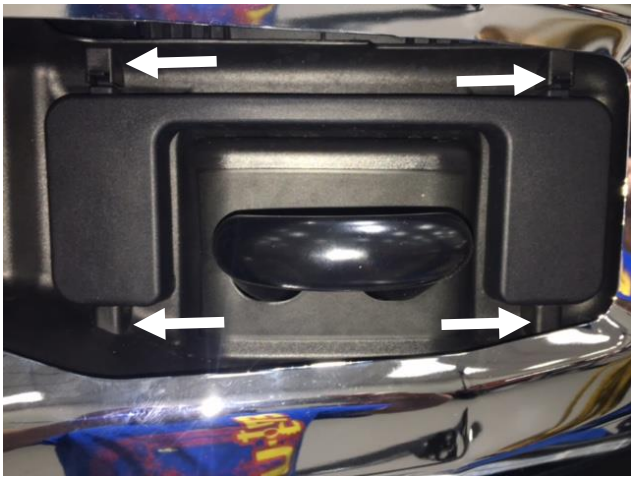

Will not be re-installed

Step 1: Remove the plastic tow hook cover by carefully pulling forward to release from bumper. (Both sides)

Step 2: Remove the two inner tow hook bolts from the jack plate and set aside.
(Bothe sides)

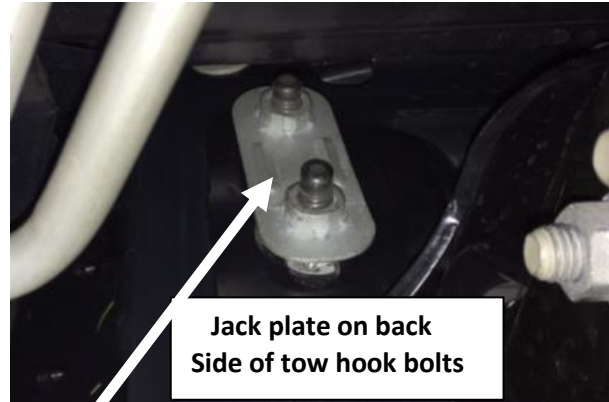

Step 3: Using the factory tow hook bolts and the jack plate, install Light Bar and tighten hardware. **Note:** *alternating from upper bolt to lower bolt will ensure a proper seat when tightening.*

