



**Installation Instructions**  
**Light Bar / Pre-Runner**  
**2014+ Toyota Tundra**  
**Models: T144LB, T1430LD,**  
**T143LH**

- |                       |                        |
|-----------------------|------------------------|
| <b>Hardware Kit</b>   | <b>Parts included</b>  |
| (4) 3/8" x 1" bolts   | 1- Driver L Bracket    |
| (8) 3/8" washers      | 1- Passenger L Bracket |
| (4) 3/8" lock washers |                        |
| (4) 3/8" nuts         | T143LH (additional)    |
|                       | 2 - stiffener brackets |
|                       | (2) 3/8" x 1" bolts    |
|                       | (2) 3/8" washers       |
|                       | (2) 3/8" lock washers  |
|                       | (2) 3/8" nuts          |

Loosen the 3 outside nuts that hold bumper to frame, loosen enough to slide on mounting brackets..

Slide brackets onto bumper mounting studs and hand tighten nuts to allow for centering of bar.  
 Passenger and Driver side brackets are specific.

(Figure 1) Cut plastic horizontal bar out of lower grill that is in front of bracket.

Pre-Runner only, remove inner bumper nut, position stiffener bracket on stud, reinstall factory nut and hand tighten, bolt through stiffener hole on back of main bracket using supplied hardware, hand tighten only.


Using supplied hardware, bolt light bar or Pre-Runner to brackets.

Hand tighten all fasteners


Center light bar and tighten all hardware

Installation is complete.

**Brackets**

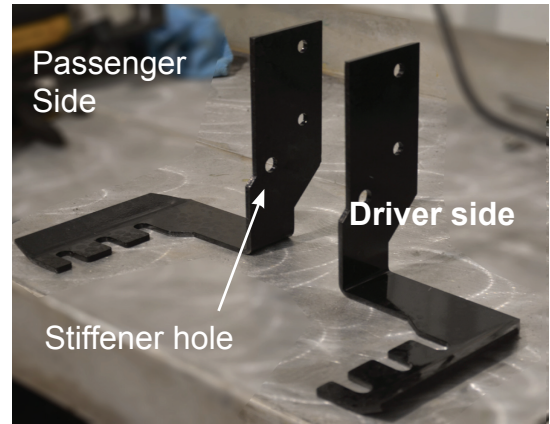

(figure 1) Where to cut lower grill

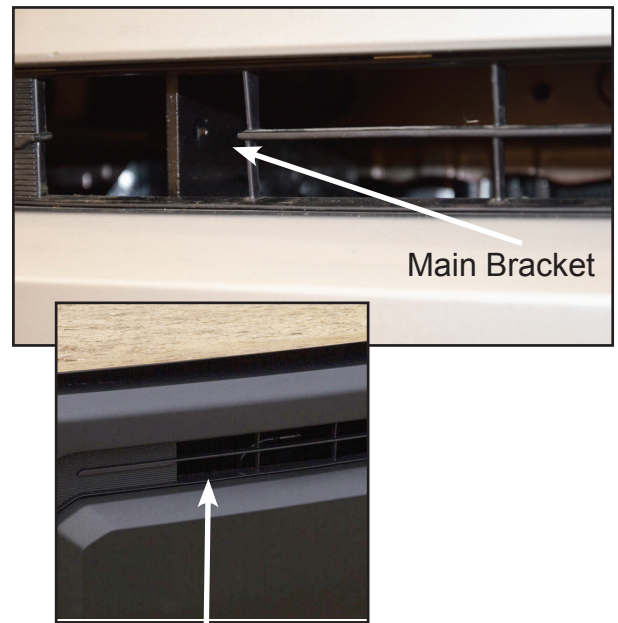

Cut this bar, bracket will line up behind it

Products Licensed to N-FAB Inc. by Fichter Designs are protected by US Patent Law and International Copy Right Law. Protected Patents include US Patent #6588783, #6874801, #7416202. Other patents and continuances pending. N-FAB product configurations also protected by International Trade Dress Law. All Designs and Patent infringements will be prosecuted to the full extent of the law.